


Connecting the PT to the FlexSmart TRMS Module:

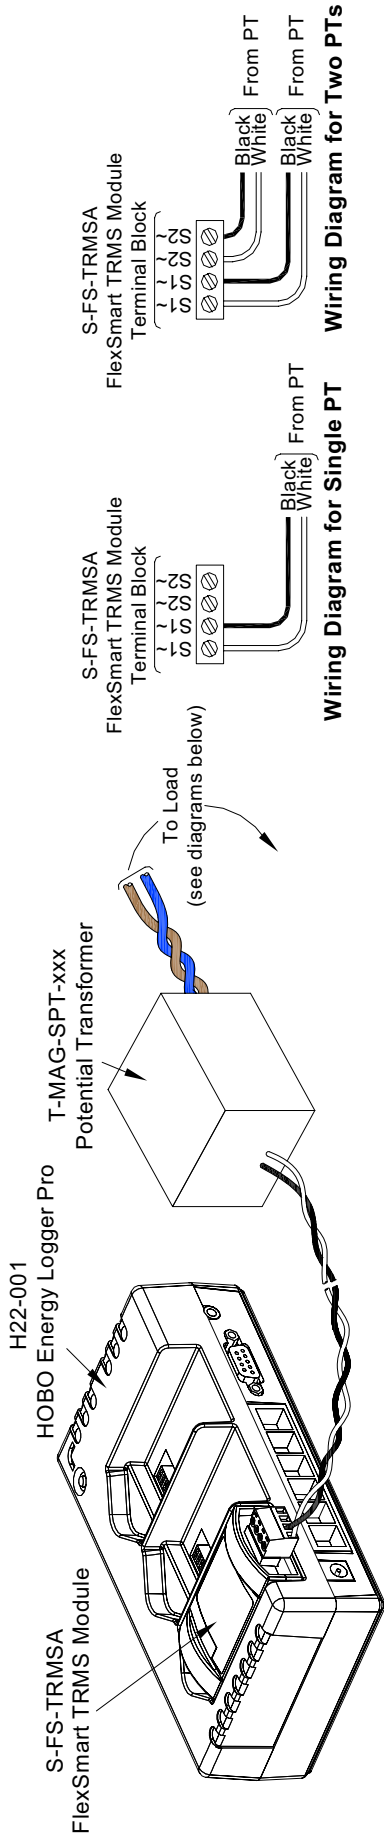

Typical Electrical Power Configurations:

