



Wiring Diagram




onset®
STOP CALIBRATE
MEMORY
LOGGING
01:42 H-M
HOB0® motor on/off logger



Typical Measurement Configuration
(placed directly on motor housing)

Alternate Measurement Configuration
(external current switch, CSV-A8)

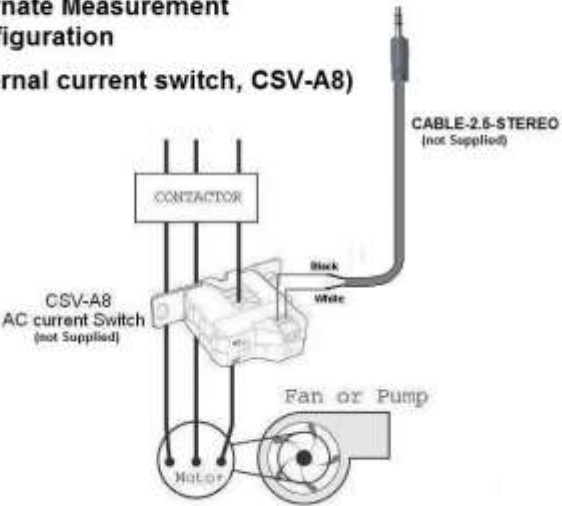

CONTRACTOR
CSV-A8 AC current Switch (not Supplied)
Black Wire
CABLE 2.5-S-STEREO (not Supplied)
Fan or Pump
Motor

Detailed description: The diagram shows an electrical circuit. A 'CONTRACTOR' is connected to a 'CSV-A8 AC current Switch'. The switch has two output lines: one goes to a 'Fan or Pump' and the other to a 'Motor'. A 'CABLE 2.5-S-STEREO' is connected to the switch, with a 'Black Wire' label pointing to the cable's internal wiring.